

IMPORTANT

User guide Yamada pump-skid



Prior to operate the pump-skid

- Connect air to pump-skid and confirm at the gauge that working pressure is set to max 7 bar.
- When pumping large volume with high-density fluid, rig up 4" suction line and run 2 pumps at reduced rate during the pumping operation.
- For transferring small volume of high-density fluid the 2" suction line and one pump can be used IF the pump run at reduced capacity.
- NEVER let the pump run dry or pump with closed suction valve.
- Flush pumps with water after each operation and prior to shipment.
- Assemble the blind caps before the unit is sent onshore.

For more information:

Phone. +47 51 71 53 81 Fax. +47 51 71 53 89

E-Mail: Morten@ots.as